# E50 Series

# **INSTRUCTION MANUAL**

TCD210020AF

**Autonics** 

Thank you for choosing our Autonics product.

Be sure to read and fully understand the instruction manual and other manuals before using the product.

For your safety, read and follow the safety precautions, warnings, cautions, and handling instructions listed in the instruction manual, other manuals, and the Autonics website.

Keep this document in a location where it can be easily accessed.



Visit the Autonics website (www.autonics.com or QR code) for the latest information, Manuals, CAD files, certifications, software, etc. are available. The dimensions, specifications, certifications, etc. are subject to change without notice for product improvement. Certain models may be discontinued without notice.

### **Safety Precautions**

- 'Safety Precautions' are provided to ensure safe and proper use of the product and to prevent accidents or hazards. Please make sure to follow them carefully.
- ullet symbol indicates a caution, warning of potential hazards under certain conditions.

▲ Warning Failure to follow instructions may result in serious injury or death.

- 01. Fail-safe device must be installed when using the product in applications that may cause serious injuries or property loss. (E.g. nuclear control systems, medical equipment, ships, vehicles, railroads, aircraft, combustion devices, safety devices, security systems, disaster prevention devices, etc.) Failure to do so may result in personal injury, property loss or fire. **02. Do not use or store the product in environments containing flammable,**
- explosive, or corrosive gases, or in places exposed to high humidity, direct sunlight, radiant heat, vibration, shock, or salt.
- 03. Install the product on a device panel before use.
- 04. Do not connect, repair, or inspect the product while connected to a power

Failure to do so may result in fire

- 05. Check the connection diagram before wiring.
- ilure to do so may result in fir
- 06. Do not make any unauthorized modifications to the product.

Failure to do so may result in fire.

▲ Caution Failure to follow instructions may result in injury or product damage.

- 01. Use the product within its rated specifications and performance limits. ailure to do so may result in fire or product damage
- 02. Do not short-circuit the load.
- Failure to do so may result in fire.

  03. Do not use the product near devices that generate strong magnetic fields or electrical noise, or in environments with strong alkaline or acidic

Failure to do so may result in product damage.

## **Cautions During Use**

- Make sure to follow the instructions in 'Cautions During Use'.
- Failure to do so may result in unexpected accidents.
- · Power input should be supplied from an isolated and limited voltage/current source, or from a Class 2 or SELV power supply..
- When using noise-generating devices (e.g. switching regulators, inverters, servo motors, etc.), ground the shielded wire to F.G.
- Ground the shielded wire to F.G.
- When supplying power with an SMPS, ground the F.G. terminal and connect a noise suppression capacitor between the 0 V and F.G. terminals.

  To prevent surges and inductive noise, separate the wiring from high-voltage and
- power lines, and keep wiring lengths as short as possible.
- For line driver models, always use twisted-pair cables with sealing, and use receivers suitable for RS-422A communication on the receiver side.
- When extending wiring, check the cable type and response frequency, as line resistance and line-to-line capacitance may cause increased residual voltage or
- This product may be used in the following environmental conditions.
- Indoors (within rated environmental performance specifications)
- Altitude: up to 2.000 m
- Pollution Degree 2
- Installation Category II

### **Cautions During Installation**

- · Install the product within the rated specifications in recommended usage
- Do not apply excessive load to the rotating shaft.
- When connecting a coupling to the shaft, do not apply impact force such as hammering. There is a risk of product damage.
- When using a wrench to secure the product or coupling, tighten with a torque less than 0.15 N•m.
- If the misalignment between rotating shafts (parallel misalignment, angular misalignment) is excessive during coupling, the lifespan of both the coupling and encoder may be reduced.
- If a coupling is not used, impact or load may be applied directly to the encoder shaft, and the lifespan of the encoder may be reduced.
- After securing the product and cable, do not pull with a force exceeding 30N.

# Ordering Information

For reference only. The actual product does not support all combinations. To check all supported models, please refer to the Autonics website

TO CITCO	n all st	арропц	La IIIO	ucis, pic	Lase IV	cici to ti	ic / tu t	OTTICS W	CDSILC			
E50	0	2	-	8	-	4	-	6	-	6	-	7

**⑤** Control output

V: Voltage output

L: Line driver output

O Power supply

24: 12 - 24 VDC  $\pm$  5%

No mark: Axial cable type

CR: Axial connector type

CS: Radial connector type

C: Axial cable connector type

5:5 VDC ± 5%

Connection

T: Totem-pole output

N: NPN open collector output

# 1 Shaft type

S: Shaft type

### 2 Shaft outer diameter

8: Ø 8 mm

### Resolution

Number: Refer to resolution in 'Specifications'

### Output phase

2: A, B 3. A B 7 4: A,  $\overline{A}$ , B,  $\overline{B}$ 6: A,  $\overline{A}$ , B,  $\overline{B}$ , Z,  $\overline{Z}$ 

# **Product Components**

- Product Instruction manual
- Coupling × 1

• Bolt × 7

• Bracket  $\times$  1

# **Sold Separately**

• M17 connector cable: CID6S-□, CID9S-□

# Connections

- Unused wires must be insulated
- The metal case and shielded wire of encoders must be grounded (F.G.).
- F.G. (Frame Ground) must be grounded separately

# ■ Totem-Pole / NPN Open Collector / Voltage Output

Pin	Color	Function	Pin	Color	Function
1	Black	OUTA	4	Brown	+V
2	White	OUTB	5	Blue	GND
3	Orange	OUTZ	6	Shield	F.G.



# **■** Line Driver Output

Pin	Color	Function	Pin	Color	Function
1	Black	OUTA	5	White	OUT B
2	Red	OUTĀ	6	Gray	OUT B
3	Brown	+V	7	Orange	OUT Z
4	Blue	GND	8	Yellow	OUT Z
_			9	Shield	F.G.


# M17 9-pin layout


### **Circuit Diagram**

· Output circuits are identical for all output phases.


# ■ Totem-Pole Output


■ NPN Open Collector Output





# ■ Voltage Output






# **Output Waveform**

• The rotation direction is based on facing the shaft, and it is clockwise (CW) when rotating to the right.

■ Line Driver Output

• Phase difference between A and B:  $\frac{1}{4} \pm \frac{1}{8}$  (T = 1 cycle of A)

### ■ Totem-Pole / NPN Open Collector / **Voltage Output**

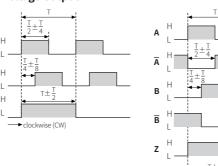

### **Specifications**

Model	E50S8-🗆-	E50S8-□- □-N-□-□	E50S8-□- □-V-□-□	E50S8		
Resolution	1/2/5 PPR <sup>01)</sup> 10 to 8,000 PPR model					
Control output	Totem-pole output	NPN open collector output	Voltage output	Line driver output		
Output phase	A, B, Z	A, B, Z A, B, Z		$A, \overline{A}, B, \overline{B}, Z, \overline{Z}$		
Sink current	≤ 30 mA	≤ 30 mA	-	≤ 20 mA		
Residual voltage	≤ 0.4 VDC==	≤ 0.4 VDC==	≤ 0.4 VDC==	≤ 0.5 VDC==		
Source current	≤ 10 mA	-	≤ 15 mA	≤ -20 mA		
Output voltage (5 VDC==)	$\geq$ (V <sub>cc</sub> - 2.0) VDC==	-	$\leq (\frac{R_L}{R_1 + R_1} \times V_{CC})$	≥ 2.5 VDC==		
Output voltage (12 - 24 VDC==)	$\geq$ (V <sub>cc</sub> - 3.0) VDC==	-	VDC== 02)	≥ (V <sub>CC</sub> - 3.0) VDC==		
Response speed 03)	<sup>1)</sup> ≤ 1 μs ≤ 0.5 μs					
Max. response freq.	300 kHz					
Max. allowable revolution 04)	5,000 rpm					
Certification	C € ĽK [H[ 05)	C E K ENI	C E K ENI	C € FR EHE		

- Depending on the control output, only A, B or A, A, B, B are output
- 02) The output voltage varies depending on load resistance (R<sub>L</sub> = load resistance
- 03) Based on cable length: 2 m, I sink: 20 mA
- 04) Select resolution to satisfy Max. allowable revolution ≥ Max. response revolution [max. response revolution (rpm) =  $\frac{\text{max. response frequency}}{\text{resolution}} \times 60 \text{ sec}$ ]
- 05) Certifications may differ depending on the model. Check the Autonics website for specific certification


Connection	Axial cable type	Axial cable connector type	Axial connector type	Radial connector type	
<b>Starting torque</b> ≤ 0.007 N m			≤ 0.078 N m		
Inertia moment	$\leq$ 80 g·cm <sup>2</sup> (8 $\times$ 3	10 <sup>-6</sup> kg⋅m²)	$\leq 400 \mathrm{g} \cdot \mathrm{cm}^2 (4 \times 10^{-5} \mathrm{kg} \cdot \mathrm{m}^2)$		
Allowable shaft load	d Radial: ≤ 10 kgf, Thrust: ≤ 2.5 kgf				
Init weight $\approx 275 \mathrm{g} (\approx 363 \mathrm{g})$			≈ 180 g (≈ 268 g)		
Dower cumply	5 VDC= ± 5% (ri	pple P-P: ≤ 5%) /			


(with packaging)	~ 215 g (~ 303 g)	~ 160 g (~ 266 g)				
Power supply	rer supply $5 \text{ VDC} = \pm 5\% \text{ (ripple P-P: } \leq 5\%) / 12 - 24 \text{ VDC} = \pm 5\% \text{ (ripple P-P: } \leq 5\%) \text{ model}$					
Current consumption	Totem-pole, NPN open collector, Voltage output: ≤ 80 mA (no load) Line driver output: ≤ 50 mA (no load)					
Insulation resistance	≥ 100 MΩ (500 VDC== megger)					
Dielectric strength	Between charging part and case: 750 VAC~ 50 / 60 Hz for 1 min.					
Vibration resistance	1 mm double amplitude at frequency 10 to 55 Hz in each X, Y, Z direction for 2 hours					
Shock resistance	≲75 G					
Ambient temp.	-10 to 70 °C, storage: -25 to 85 °C (no freezing or condensation)					
Ambient humidity 35 to 85% RH, storage: 35 to 90% RH (no freezing or conde						
Protection rating	Axial cable type / cable connector type: IP50 (IEC standard) <sup>01)</sup> Axial / Radial connector type: IP64 (IEC standard)					
Cable						
Wire specifications	L ΔW(G)A (f) f)8 mm Afterore) insulator diameter: (A 1 mm					
Connector Totem-pole, NPN open collector, Voltage output: M17 6-pin plug specifications Line driver output: M17 9-pin plug type						

<sup>(</sup>starting torque:  $\leq 0.078 \text{ N m}$ , inertia moment:  $\leq 400 \text{ g} \cdot \text{cm}^2 (4 \times 10^5 \text{ kg} \cdot \text{m}^2)$ )

### Dimensions

- Unit: mm (Refer to the CAD files from the Autonics website for exact dimensions)
- · Cable type, connector type shown as reference.
- Refer to 'Specifications' for detailed specifications of cable, wire and connector.

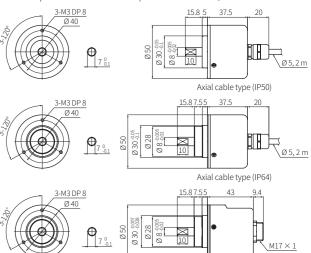



### ■ Bracket



